

LAVAMAT 50212/50612

Washing machine

User information



PERFEKT IN FORM UND FUNKTION

AEG

More user manuals on [ManualsBase.com](https://www.ManualsBase.com)

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety	5
Description of the appliance	7
Control Panel	7
Programme overview	8
Before the first wash	10
Preparing and sorting washing	10
Running a washing cycle	11
Opening the door/Loading the washing	11
Adding detergent/additives.....	11
Switching on the appliance/selecting a programme.....	13
Changing the spin speed/Selecting rinse hold	13
Selecting programme options.....	14
PRE WASH	14
STAIN	14
Activating/deactivating RINSE+.....	14
Setting the delay timer.....	15
Starting a programme.....	15
Interrupting a programme/adding washing	15
End of the wash programme/Removing the washing.....	16
Child safety device	17
Cleaning and maintenance	17
What to do if...	19
Remedying minor malfunctions yourself	19
If the wash results are not satisfactory	21
Carrying out an emergency drain	22
Drain pump.....	23
Disposal	24
Technical data	25
Consumption values	25

Installation and connection instructions	26
Safety information for the installation	26
Installing the appliance	26
Transporting the appliance.....	26
Unpacking.....	27
Where to install	29
Making the appliance level.....	30
Electrical connection	30
Connecting to the water supply	30
Water inlet.....	30
Water drainage.....	32
Guarantee/Customer Service	33
Service	35

Operating Instructions



Safety

Prior to using for the first time

- Follow the **"Instructions for installation and connection"**.
- If the appliance is delivered in the winter months when there are minus temperatures: Store the washing machine at room temperature for 24 hours before using for the first time.

Correct use

- The washing machine is only designed for the washing of normal domestic laundry at home.
- Additions or modifications to the washing machine are not permitted.
- Use only detergents and additives that are suitable for use in domestic washing machines.
- The washing must not contain any inflammable solutions. Danger of explosion!
- Do not use the washing machine for dry cleaning.
- Dyes/colour removers may only be used in the washing machine, if the manufacturer of these products expressly permits this. We cannot be held responsible for any damage arising.


Child safety

- Keep packaging away from children. There is a risk of suffocation.
- Children often do not recognise the hazards associated with electrical appliances. Don't allow children to use the washing machine unsupervised.
- Make sure that children and pets don't climb into the drum of the washing machine. Could endanger life!


General safety

- Repairs to the washing machine must only be carried out by qualified service engineers.
- Never use the washing machine if the mains cable is damaged; or if the control panel, work top or plinth area is damaged such that the inside of the appliance is freely accessible.
- Switch off the washing machine before cleaning, maintenance and servicing. In addition, pull the mains plug out of the socket or – in the case of a permanent connection – switch off the cut-out in the fuse box or remove the screw fuse completely.
- If operation is stopped, disconnect the appliance from the mains supply and shut off the water tap.
- Never unplug the appliance by pulling on the cable. Always pull the plug.
- Multi-way plugs, connectors and extension cables must not be used. **This could constitute a fire hazard through overheating.**
- Never wash the washing machine down with a water jet. Danger of electric shock!
- In washing programmes with high temperatures the glass in the door gets hot. Do not touch it.
- Before emergency emptying of the appliance, before cleaning the drain pump or opening the door in an emergency, let the water cool down.
- Small animals can nibble at the cables and water hoses. Danger of electric shock and danger of water damage! Keep small animals away from the washing machine.

 
 


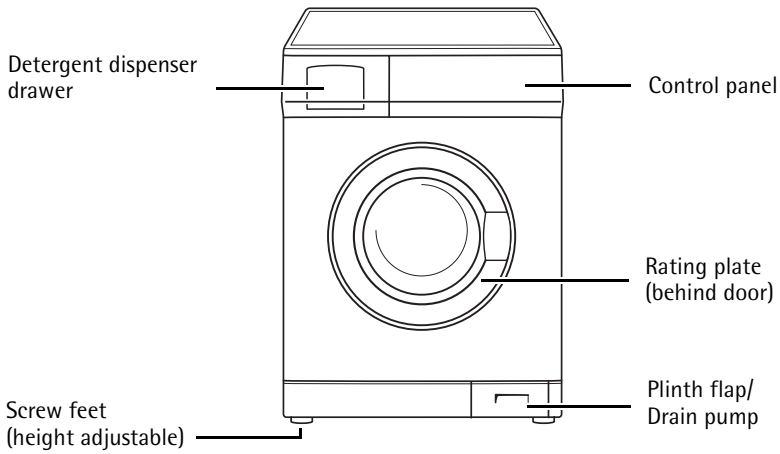



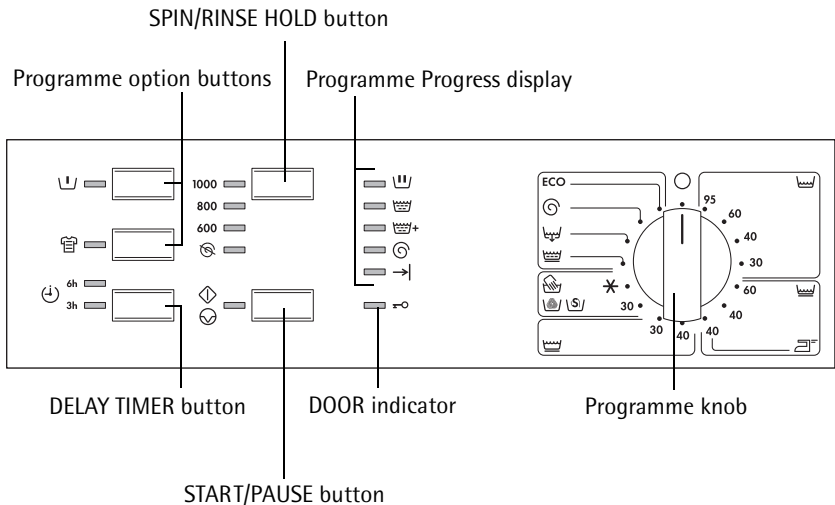





Description of the appliance



 Control Panel




Programme overview
























Programme	max. load ¹⁾ (dry washing)	Programme options		Spin speed		 (RINSE HOLD)
		 (PRE WASH)	 (STAIN)	1000 (L 50612) 850 (L 50212)	600	
ECO (ENERGY SAVING) ²⁾	6 kg	•	•	•	•	•
 (COTTONS/LINEN) 95, 60, 40, 30	6 kg	•	• ^{3) 4)}	•	•	•
 (EASY-CARE) 60, 40	3 kg	•	•	•	•	•
 (EASY IRON) 40	1 kg	•	•	•	•	•
 (DELICATE) 40, 30	3 kg	•		•	•	•
 (WOOL)/  (SILK)  (Handwashing) 30,  (COLD)	2 kg			•	•	•
 (GENTLE RINSE)	3 kg			•	•	•
 (DRAIN)						
 (SPIN)	6 kg			•	•	

 1) A 10 litre bucket contains approximately 2.5 kg of dry washing (cotton)

2) Programme settings for tests in accordance with or in the style of EN 60 456 and IEC 60 456 are described in the section "Consumption values".

3) Recommended load for short programmes is 3kg; full loading is possible however with somewhat reduced cleaning results.

4)  (STAIN) can be set at 40° and upwards only, as stain treatments are effective only at higher temperatures.


Application/Features	Care symbols ¹⁾
Energy saving programme which washes at 60 °C for lightly to normally soiled whites/coloureds made of cotton/linen.	 
Programme for normally to heavily soiled whites/coloureds made of cotton/linen.	  
Programme for easy-care mixed fibres and synthetics.	  
Wash programme which washes at 40 °C for easy-care fabrics which after being washed using this programme need to be ironed only lightly or not at all.	 
Gentle programme for fine fabrics such as layered fibres, micro-fibres, synthetics, curtains (load max. 20 to 25 m ² curtains). If  (RINSE HOLD) is used, also suitable for items with a climatic membrane, e.g. outdoor clothing.	 
Particularly gentle programme for machine washable and hand washable wool/silk.	  
Separate gentle rinse (3 rinse cycles, liquid conditioner is washed in from compartment  , spin). Not suitable for wool. Reduce the spin speed when rinsing easy-care and delicate items.	  
Pumps water away after a rinse hold.	
Draining and spinning e.g. following rinse hold, or separate spinning of hand-washed cottons/linen. Reduce the spin speed when rinsing easy-care, delicate and wool items.	  

1) The figures in the care symbols indicate the maximum temperatures.

Before the first wash

1. Open the detergent dispenser drawer.
2. Pour about 2 litres of water through the detergent dispenser drawer into the washing machine.

This closes the water container when the next programme is started and the economy valve can function properly.

3. In order to remove any residues from the drum and water container which may have been left during manufacturing, perform the first wash cycle without any washing in the machine. Programme:  (COTTONS/LINEN) 95, add 1/4 of a measuring cup of washing powder.

Preparing and sorting washing


Preparing washing

- Empty pockets. Remove foreign bodies (e. g. coins, paper clips, nails, etc.).
- Do up zips, button up covers to prevent damage to washing.
- Remove the runners from net curtains or cover them with a net or a bag.
- Wash sensitive and small items in a net or a pillow case, e.g. net curtains, tights, socks, handkerchiefs, bras.

Important! Bras and other items containing wires should only be washed in a net bag. The wires can work loose and damage the appliance.

Sorting washing




- By colour: Wash white and coloured washing separately. Washing can run.
- By temperature, type of washing and care symbol.

 


Important! Do not wash fabrics with care symbol  (= do not wash!) in the washing machine.

Running a washing cycle


Opening the door/Loading the washing

1. To open the door: pull the door's handle.

When the appliance is switched on, the  (DOOR) and / (START/PAUSE) indicators show whether the door can be opened:

 (DOOR) indicator	 /  (START/PAUSE) indicator	Can the door be opened?
flashing	flashing	yes, after approx. 2 minutes
illuminated	illuminated	no, water level and/or temperature too high
off	flashing	yes

2. Separate individual items and load washing loosely into the machine. Mix large and small items.
Important: Do not allow items of clothing to get caught between the door and the rubber seal.
3. Press the door firmly shut. The catch must audibly latch.

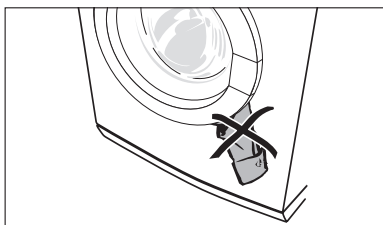

Adding detergent/additives

Warning! Use only detergents and additives that are suitable for use in domestic washing machines.



For USA and Canada only!


Important! Only LOW-SUDSING detergent suitable for a front-loading washing machine can be used in this machine. This machine can heat the water up to 95 degrees celsius, or 200 degrees fahrenheit, and care should be taken to ensure that the correct washing powder is used. If you have any doubt, check with your dealer or the distributor.
WARRANTY AND CONSEQUENTIAL DAMAGES ARE VOIDED IF A LOW SUDSING DETERGENT IS NOT USED.

Dose detergent and additives according to the instructions of the detergent and additive manufacturers. Follow the advice on the packaging.

Dosing depends upon:

- the washing's degree of soiling,
- the size of the load
- the degree of hardness of the water supply.
- If the manufacturer does not give instructions for small loads: for a half load, use a third less, for a very small load, use only half of the detergent that is recommended for a full load.
- From water hardness 2 (= medium) upwards, water softener should be used. Detergent can then always be dosed for water hardness 1 (= soft). Your local water company will be able to give you information about the water hardness in your area.

1. Pull the detergent dispenser drawer out as far as the stop.
2. Add the detergent/additives.
3. Push the drawer in fully.

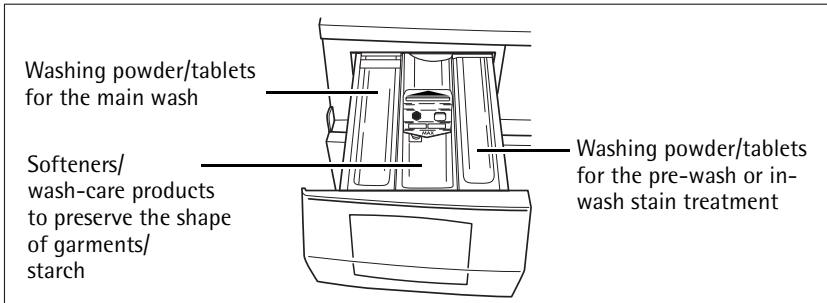

Washing powder/tablets for the main wash

If you are using water softener and need the right-hand compartment for the pre-wash/stain treatment agent, add the water softener to the main wash detergent in the left compartment.

Softeners, wash-care products to preserve the shape of garments, starch

Do not fill the compartment beyond the MAX mark. Dilute thick liquid concentrates according to the manufacturer's instructions before putting them into the drawer. Dissolve powder starches.

If you use liquid detergents:

Add liquid detergent using the dosage containers provided by the detergent manufacturer.


Switching on the appliance/selecting a programme

Set the programme and temperature using the programme knob.




By selecting a programme, you switch the appliance on at the same time.

The programme progress display indicates the programme steps that the selected programme will perform.

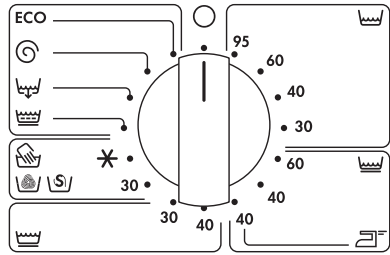

Changing the spin speed/Selecting rinse hold

The washing machine suggests the maximum permitted spin speed that is suitable for the selected programme. You can reduce this spin speed:

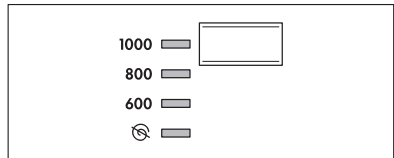

To do this press the Spin/🌀 (RINSE HOLD) button repeatedly until the desired indicator lights up.



The speed for the final spin can still be altered during the programme. To do this:


1. Press the ⏪/⏩ (START/PAUSE) button.
2. Change the spin speed.
3. Press the ⏪/⏩ (START/PAUSE) button again.

🌀 (RINSE HOLD)

If 🌀 (RINSE HOLD) is used, the washing remains submerged in the final rinse water. There is no final spin, only an intermediate spin. The intermediate spin cycle depends on the selected programme and cannot be changed.

Selecting programme options



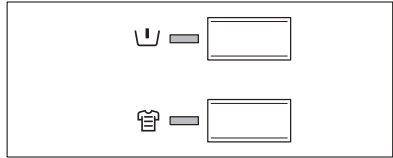

If desired, press the programme option button(s). The corresponding indicator lights up.



PRE WASH

Warm pre-wash before the main


 

 
 
 

wash that follows automatically; with intermediate spin for

 (COTTONS/LINEN) and  (EASY-CARE)/ (EASY IRON), without intermediate spin for  (DELICATES).

 


 


 

 

STAIN

For treating heavily soiled or stained washing. In-wash stain treatments are washed in at the optimum time as the programme progresses.









Activating/deactivating RINSE+

If + (RINSE+) is activated, two additional rinse cycles take place during the  (COTTONS/LINEN),  (EASY-CARE)/ (EASY IRON),  (DELICATE) and  (GENTLE RINSE) programmes. + (RINSE+) remains permanently programmed – even after the appliance has been switched off.


Activating + (RINSE+):

 

1. Turn programme knob to  (COTTONS/LINEN),  (EASY-CARE)/ (EASY IRON) or  (DELICATE) (at any temperature).
2. Press the  (PRE WASH) and  (DELAY TIMER) buttons simultaneously until  (RINSE) and + (RINSE+) are illuminated in the programme progress display. + (RINSE+) is now permanently activated. + (RINSE+) is illuminated in the programme progress display prior to the start of a programme and while the additional rinse cycles are taking place.

Deactivating + (RINSE+):


1. Turn programme knob to  (COTTONS/LINEN),  (EASY-CARE)/ (EASY IRON) or  (DELICATE) (at any temperature).
2. Press the  (PRE WASH) and  (DELAY TIMER) buttons simultaneously until + (RINSE+) is no longer illuminated in the programme progress display. + (RINSE+) is now permanently deactivated.


Setting the delay timer

The  (DELAY TIMER) button allows you to delay the start of a programme.

 1. Select a programme.
2. Press the  (DELAY TIMER) button once if you would like the wash programme to begin in 6 hours. The **6h** indicator will illuminate. Press the  (DELAY TIMER) button twice if you would like the wash programme to begin in 3 hours. The **3h** indicator will illuminate.




If you press the  (DELAY TIMER) button once again the delay timer setting is cancelled. The indicator goes out.

3. To activate the delay timer, press the  (START/PAUSE) button.



 
Note: If a start delay of 6 hours is selected, the **6h** indicator will illuminate. After 3 hours the indicator will change and **3h** will illuminate. After a total of 6 hours the wash programme will begin.

Starting a programme

1. Check that the tap is turned on.
2. Press the  (START/PAUSE) button. The programme starts or will start after the delay timer has elapsed as set.




During the wash programme the current stage of the programme is shown in the programme progress display.



 
If after pressing the  (START/PAUSE) button the  (END) display flashes 4x, the door has not been closed properly. Push the door firmly closed and press the  (START/PAUSE) button again.


 
Interrupting a programme/adding washing

Interrupting a programme

- A washing programme can be interrupted at any time by pressing the  (START/PAUSE) button. It is then re-started by pressing the  (START/PAUSE) button again.
- To stop the washing machine before the programme has ended, turn the programme knob to  (OFF). **Important!** Be careful if there is water in the appliance!

Adding washing

It is possible to add washing, as long as the  (DOOR) light is not lit.

1. Press the  (START/PAUSE) button. The door can be opened.
2. Shut door and press the  (START/PAUSE) button again. The programme continues.

End of the wash programme/Removing the washing

When the programme has finished, →| (END) will illuminate in the programme progress display. As soon as the ⇨ (DOOR) indicator has gone out and the →| (END) indicator is illuminated, the door can be opened.

1. Open the door and remove the washing.
2. Turn the programme knob to ○ (OFF).
3. Turn off the tap.
4. After the machine has finished washing, pull out the detergent drawer a little to let it dry out. Keep the door very slightly open so that the washing machine can air.

If Ⓞ (RINSE HOLD) was selected:

After a rinse hold ⇨ (DOOR) and →| (END) will illuminate in the programme progress display.

The water must first be drained:


- Either turn the programme selector to ○ (OFF), then to Ⓞ (DRAIN) and press the ⏏/⏏ (START/PAUSE) button (water is drained and there is no spin cycle),
- or turn the programme selector to ○ (OFF) and then to Ⓞ (SPIN). Depending on the type of washing, if required reduce the spin speed and press the ⏏/⏏ (START/PAUSE) button (water is drained and there is a spin cycle).

Child safety device

When the child safety device is set, the door can no longer be closed.

Setting the child safety device:


Use a coin to turn the knob (on the inside of the door) in a clockwise direction as far as it will go.

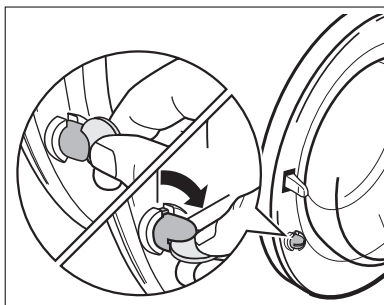

Warning! The knob must not be sunk-in after being set, otherwise the child safety device is not active. The knob must stand out as shown in the illustration.

Releasing the child safety device:

Turn the knob anti-clockwise as far as it will go.

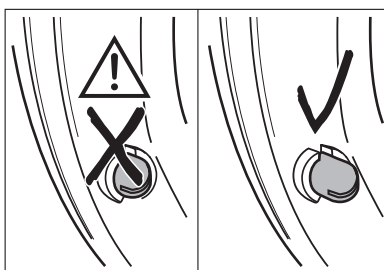

Cleaning and maintenance

Important! Do not use furniture care products or aggressive cleaners to clean the appliance.

Wipe control panel and body with a damp cloth.


Cleaning procedure

If you plan to wash mainly at low temperature, you should run a hot programme from time to time. This will reduce any deposits and clean the appliance from the inside.


Detergent dispenser drawer

The detergent dispenser drawer should be cleaned regularly.

1. Remove the detergent dispenser drawer by pulling it firmly.
2. Remove the conditioner insert from the middle compartment.
3. Clean all parts with water.
4. Put the conditioner insert in as far as it will go, so that it is firmly in place.

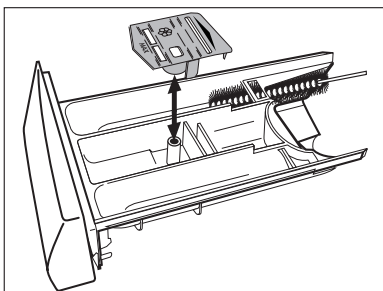


5. Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush.
6. Insert the detergent dispenser drawer in the guide rails and push it in.

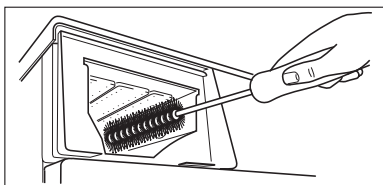

Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.

Important! Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues. Programme:  (COTTONS/LINEN) 95, add approx. 1/4 measuring cup of washing powder.

Door and rubber collar

Regularly check whether deposits or foreign bodies are present in the folds of the rubber collar or on the inside of the glass door.

Clean the glass in the door and the rubber collar regularly.


What to do if...

Remedying minor malfunctions yourself

If the programme progress display shows one of the following error messages during operation:

- →| (END) flashes 1x (problem with water inflow),
- →| (END) flashes 2x (problem with water outflow),
- →| (END) flashes 4x (door open),

please refer to the following table.



After the error has been remedied, press the  (START/PAUSE) button.

For other error messages (one or more flashing indicators in the programme progress display):

Switch the appliance off and then on again. Reset the programme.

Press the  (START/PAUSE) button.

If the error is displayed again, please contact customer service.

Problem	Possible cause	Remedy
Washing machine is not working.	Mains plug not plugged in or fuse not working.	Connect the plug to a mains socket. Check fuse.
	Door not closed properly.	Close door until the catch audibly latches.
	The  (START/PAUSE) button was not pressed for long enough.	Press the  (START/PAUSE) button for longer.
The door cannot be closed.	Child safety device has been activated.	Deactivate the child safety device.
The → (END) indicator flashes 4x.	The door is not closed properly.	Close the door properly. Restart the programme.
The → (END) indicator flashes 1x. (Problems with water inflow)	Tap turned off.	Turn on the tap.
	The filter in the screw connection on the inlet hose is blocked.	Turn off the tap. Unscrew the hose, remove the filter and clean it.
	Water tap is furred with lime scale or is faulty.	Check the tap and have it repaired if necessary.
The washing machine vibrates when operating or is not stable.	The transportation lock has not been removed.	Remove the transportation lock.
	The screw feet are not correctly adjusted.	Adjust the feet as described in the installation and connection instructions.

Problem	Possible cause	Remedy
Washing has not been spun.	Only a few large items of washing in the drum.	Always load the drum as full as possible. Mix large and small items.
Water is running out from under the washing machine.	Screw connection on the inlet hose is leaking.	Screw the inlet hose on tightly.
	Drain hose is leaking.	Replace drain hose.
	Drain pump cover is not closed properly.	Close the cover properly.
	Washing was caught in the door.	Load washing carefully for the next wash.
Emergency drain hose is leaking.	Emergency drain hose is leaking.	Close off emergency drain hose properly.
	Wash water is foaming excessively.	Too much detergent has probably been used.
The → (END) indicator flashes 2x. (Problems with water outflow.)	Kink in drain hose.	Straighten the hose.
	Maximum pumping height of 1 m has been exceeded.	Please contact customer service.
	Drain pump is blocked.	Switch off the appliance. Remove the mains plug. Clean the drain pump. Remove any foreign objects from the pump housing.
	For sink spigot connections: The sink spigot is blocked.	Clean the sink spigot.
Fabric softener not rinsed in, ☼ compartment for conditioners is filled with water.	Fabric softener insert in the compartment for conditioners is not correctly inserted or is blocked.	Clean the detergent drawer, insert the fabric softener insert firmly.

Problem	Possible cause	Remedy
The door cannot be opened when the washing machine is switched on.	Door locked.	Wait until the \Rightarrow (DOOR) indicator has gone out and the \rightarrow (END) indicator is illuminated.
	There has been a power cut. (All indicators are off.) The door will remain locked for approx. 2 minutes.	The programme will continue when the power cut is over. To remove washing: If water can be seen in the appliance, first drain the water before opening the door (see section "Carrying out an emergency drain").
Washing is very creased.	Too much washing may have been loaded.	Observe maximum loads.

If the wash results are not satisfactory

Washing is grey and scale is being deposited in the drum

- Too little detergent is being used.
- The right detergent was not used.
- Special soiling was not pre-treated.
- Programme or temperature was not correctly set.

There are grey stains on the washing.

- Washing soiled with ointment, grease or oil was washed with too little detergent.
- It was washed at too low a temperature.
- A common cause is that fabric conditioner – especially a concentrate – has got onto the washing. Such stains should be washed out as quickly as possible and make sure that you are careful when using fabric conditioner.

After the last rinse foam can still be seen.

- Modern detergents may create foam even in the last rinse cycle. The washing is however sufficiently rinsed.

There are white residues on the washing.

- This is due to the insoluble ingredients in modern detergents. They are not caused by insufficient rinsing. Shake or brush the washing. If possible turn the washing inside out before washing. Check your choice of detergent. Especially with dark colours it is advisable to use liquid detergents.


Carrying out an emergency drain




Warning! Before emergency draining, switch off the washing machine and remove the mains plug from the socket.

Warning! The water that comes out of the emergency drain hose may be hot. There is a risk of scalding. Let the water cool before performing an emergency drain.

1. Open the plinth flap and remove it.

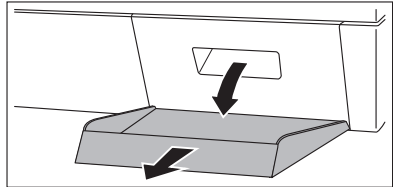


2. Take out the emergency drain hose.

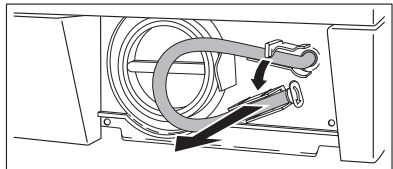

3. Place a shallow container underneath it. Then loosen the drain plug by turning it in an anti-clockwise direction and pull it out.

4. The water runs out. If it is necessary to empty the container more than once, seal up the emergency drain hose with the drain plug while you are doing so.

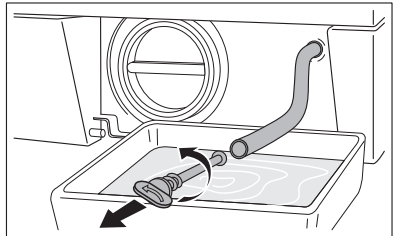

When the water has all drained away:

5. Push the drain plug firmly into the emergency drain hose and screw it tight in a clockwise direction.
6. Place the emergency drain hose back in the support.
7. Insert the plinth flap and close it.

Drain pump


The drain pump is maintenance-free. It is only necessary to open the pump cover if there is a malfunction and water is no longer being pumped out, e. g. if the pump wheel is blocked.

Please make sure before loading the washing that there are no foreign bodies in the pockets or caught between the washing. Paperclips, nails, etc. that may have got into the washing machine with the washing remain in the pump housing (foreign body trap that protects the pump wheel).




Warning! Before opening the pump cover, switch off the washing machine and remove the mains plug from the socket.


1. First carry out an emergency drain.
2. Place a cloth on the floor in front of the drain pump cover. Residual water runs out.
3. Unscrew the pump cover in an anti-clockwise direction and remove it.

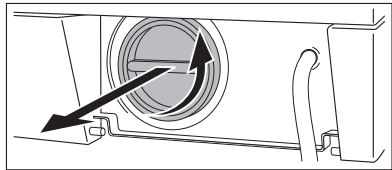


4. Remove foreign bodies and fluff from the pump housing and from the pump wheel.

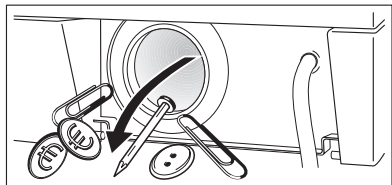

5. Check whether the pump wheel right at the back of the pump housing can turn. (It is normal for the pumping wheel to turn jerkily.) If the pumping wheel cannot be turned, please contact the Customer Care Department.

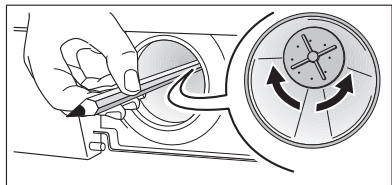

6. Insert the pump cover. Insert the guides at the sides of the cover into the guide slots and tighten the cover by turning in a clockwise direction.
7. Close off the emergency drain hose and place it in the support.
8. Close plinth flap.

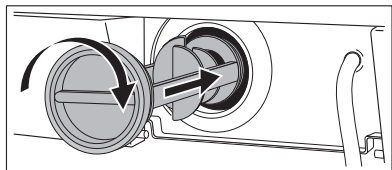

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Warning! When an appliance is finished with, remove the plug from the mains socket. Cut off the cable and plug and dispose of them. Destroy the door lock. This prevents children from trapping themselves inside and endangering their lives.








Technical data

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
 - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
 - 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x Width x Depth	850 x 598 x 603 mm
Depth when door is open	980 mm
Height adjustment	approx. +10/-5 mm
Load (depending on programme)	Max. 6kg
Area of use	Domestic
Drum spin speed	see programme overview
Water pressure	1-10 bar (=10-100N/cm ² =0.1-1.0MPa)

Consumption values

The consumption values were obtained under standardised conditions. They may vary when operating in domestic conditions.

Programme selector (Temperature)	Load size in kg ¹⁾	Water in litres	Energy in kWh	Time in minutes
 (COTTONS/LINEN) 95	6	62	2,20	146
ECO (ENERGY SAVING) ²⁾	6	49	1,12	125
 (COTTONS/LINEN) 40	6	58	0,70	129
 (EASY-CARE) 40	3	58	0,52	80
 (DELICATE) 30	3	58	0,42	66
 (WOOL)/  (SILK)  (Handwashing) 30	2	54	0,45	54

1) The load size is determined in accordance with the EN 60 456 standard load.

2) **Note:** Programme setting for testing in accordance with or in the style of EN 60 456 and IEC 60 456.

Consumption values will vary from those given depending on the pressure and hardness of the water and its initial temperature, the room temperature, type and quantity of washing, detergent used, fluctuations in mains voltage and options selected.

Installation and connection instructions



Safety information for the installation

- This washing machine **cannot be built-in**.
- Before using for the first time, check the appliance for damage sustained while it was being transported. Do not under any circumstances connect an appliance that is damaged. In the case of damage, please contact your supplier.
- Before using for the first time, all parts of the transport lock must be removed. Otherwise when spinning damage may be caused to the appliance or to neighbouring units or furniture.
- Before using the appliance for the first time, splash protection must be completed. (See "Removing the transit packaging".)
- Always plug the mains plug into a correctly installed shockproof socket.
- Permanent connection: a permanent connection must only be installed by a trained electrician.
- Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate.
- If work on the plumbing is required for the proper connection of the washing machine to the water supply, this must be undertaken by a registered plumber.
- If work on the electricity supply system is required for the proper connection of the washing machine to the electricity supply, this must be undertaken by a registered electrician.
- The washing machine's cable must only be replaced by the Customer Care Department or a registered electrician.

Installing the appliance

Transporting the appliance



Warning! The washing machine is very heavy. Risk of injury. Be careful when lifting.

- Do not lay the appliance on its front nor on its right side (as seen from the front). Electrical components may get wet.

- Never transport the appliance without its transport lock. Only remove the transport lock when the appliance is in its place of installation. Transporting the appliance without its transport lock can lead to damage to the appliance.
- Never lift the appliance by the door when it is open nor by the plinth.

When moving using a sack trolley:

- Only use the sack trolley on the side of the appliance.

Unpacking




The transport safeguard must be removed before putting the appliance into operation.


Important!

You are advised to keep all the packaging for re-use in case the machine is to be transported again.


1. After removing all the packaging, with assistance carefully lay machine on it's back to remove the polystyrene base from the bottom.

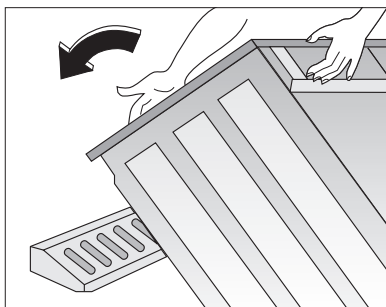


2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance.

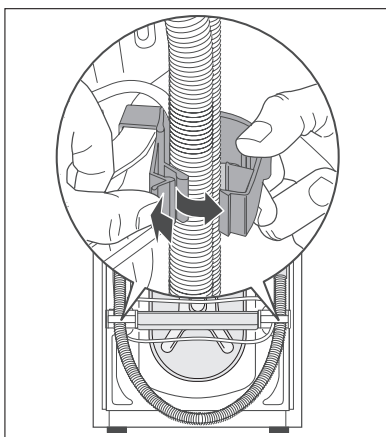


3. With a suitable spanner unscrew and remove the central rear bolt **A**. Slide out the relevant plastic spacer.

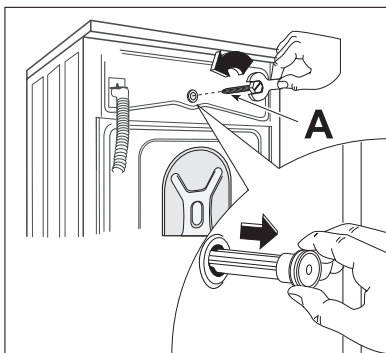


4. Unscrew and remove the two large rear bolts **B** and the six smaller bolts **C**.

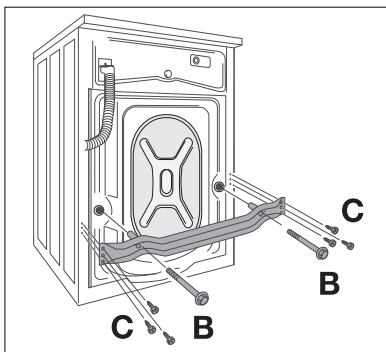


5. Remove the bracket **D**.

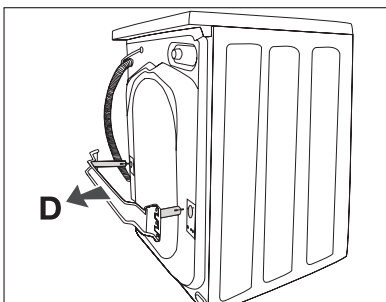


6. Tighten up the six smaller bolts **C**.

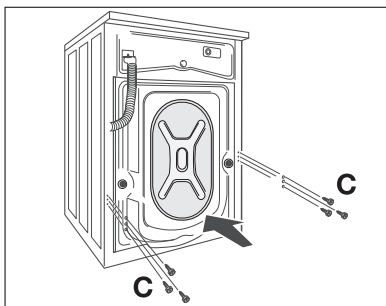

7. Open the porthole and remove the polystyrene block fitted with the adhesive tape on the door seal.

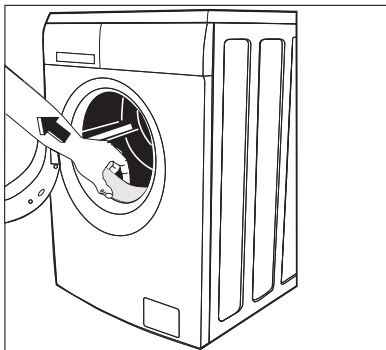

8. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.

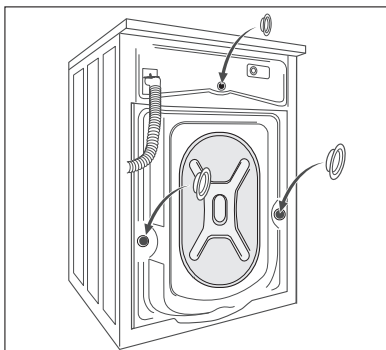

Important!

All the different plug caps are supplied with the appliance in the plastic bag containing the instruction booklet.

Connect the water inlet hose as described under the paragraph "Water inlet".

Where to install

Important! The appliance must not be used in a room where there is a danger of frost. Frost damage or impaired operation! Frost damage is not covered by the warranty.

- The surface on which the appliance is to be installed must be firm and level. Do not install the appliance on carpets or on soft floor coverings.
- The surface on which the appliance is to be installed must be clean and dry and free from coverings that move, so that the appliance does not slide.
- If the location in which the appliance is to be installed is fitted with small-format tiles, put a rubber mat (available in the shops) under the appliance.


Making the appliance level

The four feet of the appliance are pre-adjusted.

Large degrees of unevenness can be compensated for by individually adjusting the height adjustable screw feet.

Use the special spanner supplied to do this.

Important! Do not use pieces of wood, cardboard or such like to level out unevenness in the floor, but adjust the height adjustable screw feet instead.

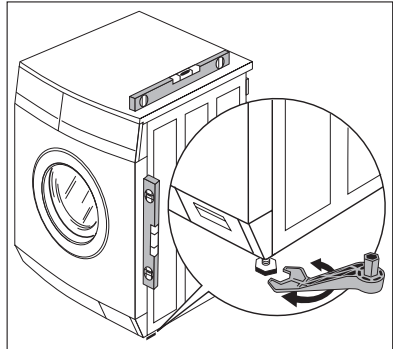

Electrical connection

Details about the voltage, type of supply and the fuses required are to be found on the rating plate. The rating plate is next to the doorway.

Connecting to the water supply

Permitted water pressure

The water pressure must be at least 1 bar ($= 10\text{N/cm}^2 = 0.1\text{MPa}$) and may be a maximum of 10bar ($= 100\text{N/cm}^2 = 1\text{MPa}$).

- If more than 10bar: Connect a pressure reduction valve.
- If less than 1 bar: Disconnect the appliance end of the inlet hose from the solenoid inlet valve and remove the flow meter. (In addition remove the filter using pointed pliers and take out the rubber gasket behind it.) Re-insert the filter.

Water inlet

Attention!


- An inlet hose is supplied and can be found inside the machine drum.
- **Do not use the hose from your previous machine to connect to the water supply.**
- **This appliance must be connected to a cold water supply.**

1. Open the porthole and extract the inlet hose.
2. Connect the hose with the angled connection to the machine.

Important!

Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

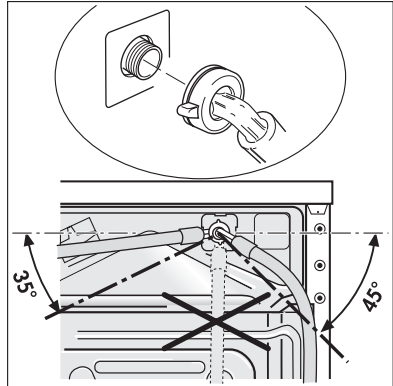


4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

Installation should comply with local water authority and building regulations' requirements.

A minimum water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.


If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system.

There should be a minimum distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank.

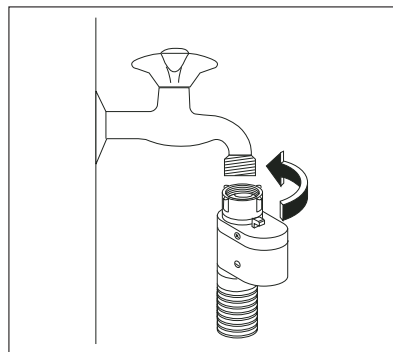

Aqua Control

The inlet hose is provided with a water stop device, which protects against damage caused by water leaks in the hose which could develop due to natural ageing of the hose. This fault is shown by a red sector in the window „A“. Should this occur, turn the water tap off and refer to your Service Centre to replace the hose.

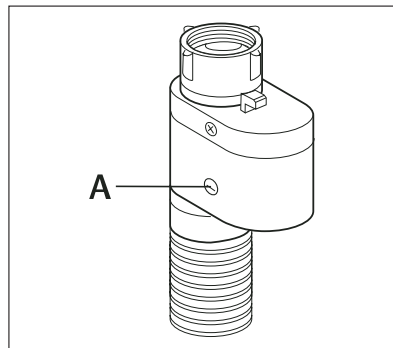


Water drainage

The maximum permitted difference between the height of the surface on which the appliance is installed and the water outlet is 1 metre.

Only original hoses may be used to extend hoses. (A maximum of 3 m laid on the floor and then 80 cm vertically). The Customer Care Department stocks outlet hoses of different lengths.

Draining water into a sink outlet

Secure the outlet/sink outlet joint with a hose band clip (available from your dealer).


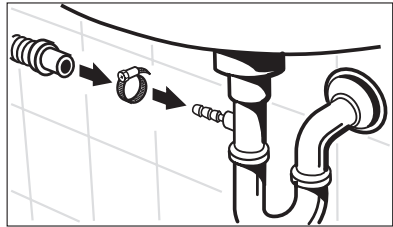


Draining water into a wash basin/bath



Important!

- Small basins are not suitable. Water may overflow.
- The end of the drain hose must not be in the water that has been pumped out. Otherwise water could be sucked back into the appliance.
- When draining into a wash basin or a bath, secure the drain hose with the supplied elbow to stop it slipping. Otherwise the water running out can force the hose out of the basin.
- When pumping the water out, check that the water is running away fast enough.

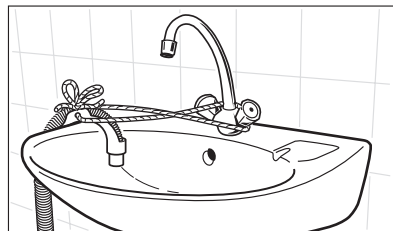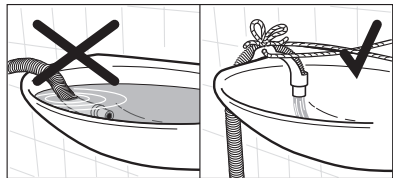

Pumping heights over 1 m

The washing machine's drain pump is able to pump water to a height of 1 meter, calculated from the surface on which the appliance is installed.

Warning! If pumping height is over 1 metre, malfunctions and damage to the appliance may arise.

For pumping heights over 1 metre a conversion kit can be obtained. Please contact the Customer Care Department.

Guarantee/Customer Service

EURO-LINE APPLIANCES

LENGTH OF WARRANTY:

TWO YEAR FULL WARRANTY

from original date of purchase, including parts and labour, to the first purchaser of this appliance

EURO-LINE WILL PAY FOR:

Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

EXCEPTIONS:

EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:

1. To install or correct the installation of an appliance
2. To instruct the use of an appliance.
3. To replace house fuses, re-set circuit breakers or correct house wiring.
4. To correct house plumbing.
5. To clean drains, filters or garbage disposers.
6. To repair an appliance if it fails due to misuse or abuse.

EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:

1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages. For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

For Service and Parts Contact:

EURO-PARTS, USA

Tel: 1-800-561-4614

Fax: 1-519-528-5001

EURO-PARTS, CANADA

Tel: 1-800-678-8352

Fax: 1-519-528 5001

EURO-LINE APPLIANCES

1-800-421-6332

Tel. Direct: 1-905-829-3980

Fax: 1-905-829-3985

User Instructions & Installation Manual

Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.

-
- Model number (shown on the rating plate)

-
- Serial number (shown on the rating plate)

-
- Date of purchase.
-

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

If service is required, contact the Service Center:

EURO-PARTS, CANADA

Tel: 1 800 678 8352

Fax: 1-519-528-500

EURO-PARTS, USA

Tel: 1-800-561-4614

Fax: 1-519-528-5001

DISTRIBUTED BY:

EURO-LINE APPLIANCES

2278 SPEERS ROAD

OAKVILLE, ONTARIO

CANADA L6L 2X8

1-800-421-6332

Tel: 905-829-3980

Fax: 905-829-3985

www.euro-line-appliances.com


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

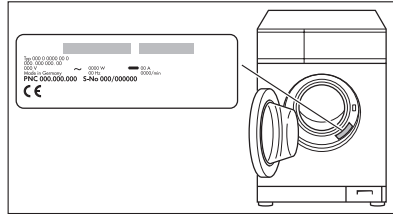

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

www.electrolux.com